

# MOUNTING BRACKET TYPE: SHRS-1000

**Material: Stainless steel**

**Advantages: Quick mounting and dismounting of the sensors / always in the same position**

**For the sensor types: STT 1000F XX**

## Mounting instructions:

1. Fasten the bracket to the pipe/surface at the desired position with 2 steel straps and locking heads, or possibly by silver soldering or TIG welding.



2. A) Apply heat conducting paste to the sensor. B) Hold the sensor obliquely towards the up bent edge. C) Insert the spring bar into the sensor mounting groove and further into the bracket's mounting groove.



3. Press the spring down beneath the down bent edge and push it into.



4. Dismounting the sensor:

When dismounting the sensor, just push the spring bar back at the up bent edge.