

MOUNTING BRACKET TYPE: LHRS-345

Material: Stainless steel

Advantages: Quick mounting and dismounting of the sensors / always in the same position

For the sensor types: TS334F, TS334FS, TS550FC, TTS500FA, TMPT100FA, TMPT500F and TMPT1000FA

Mounting instructions:

Fasten the bracket to the pipe precisely in the length direction or on the flat surface at the desired position with 2 steel straps and locking heads, or possibly by silver soldering or TIG welding.

In order to use the bracket, the straight length of the pipe must be at least 48 mm at the mounting position.



1. A) Apply heat conducting paste to the sensor. B) Hold the sensor obliquely towards the up bent edge. C) Insert the spring bar into the sensor mounting groove and further into the brackets mounting groove.



2. Press the spring bar down beneath the down bent edge and push it into.



3. Dismounting the sensor:

When dismounting the sensor, just push the spring bar back at the up bent edge.